GB Fitting Instructions for Basic Carrier

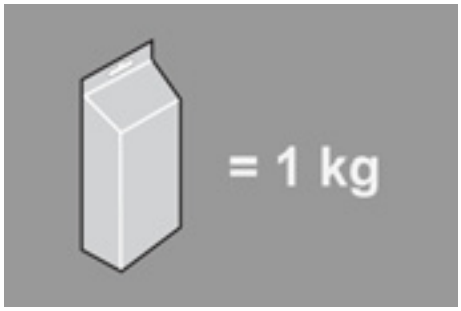

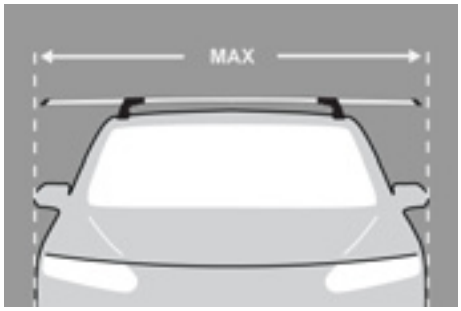

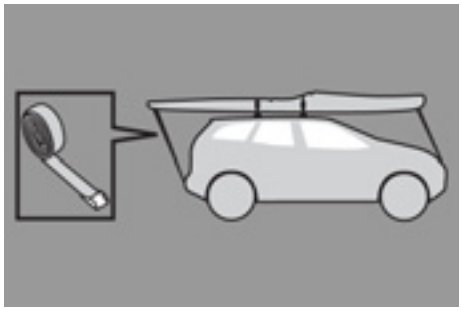

x 8

x 4

x 4

x 4

First Time Installation

- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.

- This kit fits type A and B only.
- These instructions show type A crossbar fitted. They also apply to type B.

- Use keys to remove covers.

- Use hex screwdriver to reverse adjusting screw 10 turns.

- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally 'X'.

- Remove clamp block by pressing backwards.

- Remove both pins from each leg (use spanner located inside left hand cover to assist).

- Detach foot from leg. Store loose parts in a safe place.
- Repeat for all legs.

- Select a guttermount assembly from fitting kit. Unscrew and remove clamps.

- Assemble guttermount assembly into leg (ensure guttermount blade interlocks with leg).

- Using short capscrew and washer, secure assembly onto leg (use Hex Screwdriver supplied with crossbar to assist)

- Use two M5 x 12 mm self tapping screws to secure the leg to the guttermount blade.
- Do not over tighten.
- Repeat for all legs.

Fitment

- Place crossbar on vehicle. Minimum recommended spacing between the bars is 700mm (unless otherwise stated).
- Place crossbar into gutter of vehicle.
- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.

- Loosely position crossbar ensuring the guttermount blade is hard against the inside of the vehicle gutter.

- Tighten adjusting screw to 5 Nm.

- Loosely line up clamp over the vehicle gutter.

- Use same capscrew and washer to secure clamp onto leg.

- Repeat for all legs.
- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers